

# **Operation Instruction** M-234 Side Presence Sensor


Make your choice .....



Thanks so much for your purchasing, please read this instruction

## Security Guide

before reading.

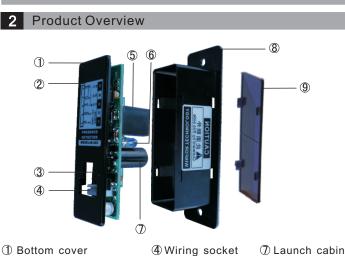


(5) Receiving cabin 2 Wiring sticker 8 Upper cover ③ Function setting dial switch⑥ Indicator light 9 Light filter


### **Overall Characteristics** 3

- Integrated surface cover, artistic design, rain-proof and dust-proof.
- Easy to fix and connect to all kinds of automatic doors.
- Detection distance can reach to 2.5 meters through one-side.
- The intelligent background learning system can adapt itself to different reflect light material, suits to install in any kinds of occasion.
- Self-correcting from external cause such as quake, distortion, move, dark, sunshine. Ensure the detector work durably.
- Transmitter and receiver are integrated and easy to install in one-side.
- Anti-pinch when people or goods come in and out.


## Installation 4

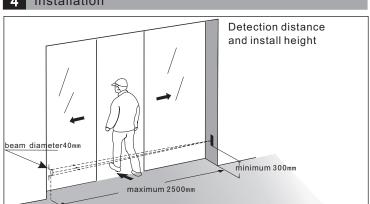

## 5 Notice

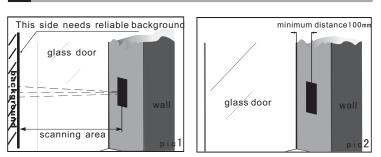


note: The background towards detector note: The minimum distance between must be reliable and stable. Or it will lose door and detector is 100mm. scanning signal.

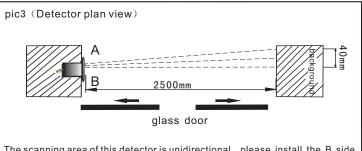

The scanning area of this detector is unidirectional, please install the B side close to moving things to avoid self-inductance.

#### Function Setting 6

Low sensitivity: switch 1 up High sensitivity: switch 1 down Please set frequency A and B respectively to avoide interfere each other in case of 2 detectors need to be installed in short distance. A scanning: switch 2 up B scanning: switch 2 down 7 Wiring of Input and Output

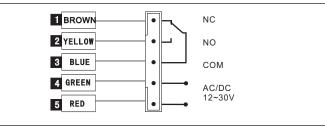

# 8 Main Technical Parameters:

Power Supply:	AC/DC12~30V
Static Power :	22mA
Dynamic Current :	60mA
Inductive Distance (MAX) :	2500mm
Induction Way:	Infrared Scanning
Scanning beam diameter:	40mm
Working Temperature:	<b>−20°</b> C+60°C
Hole Size:	78 (L) ×24 (W) ×30 (H) mm
Fixed Mode:	Hole-hidden screw