Operation Instructions

M-280W SOS WIRELESS PRESS SWITCH






1 Safety Instruction



Thank you for your purchase, please refer to the following manual before using it.

2 Product Overview

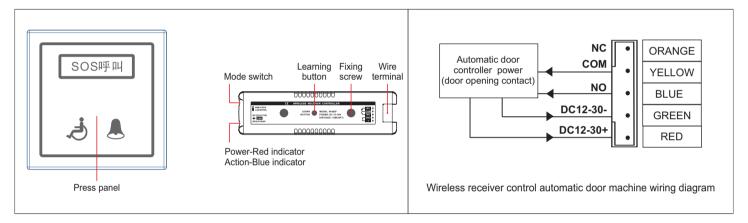

3 Matching Methods

- This product with self-learning code design, the transmitter code must be learned into the controller before use it. Up to 20pcs transmitters can be learned.
- Learning method: Press the receiver's learning button, blue indicator is on, enter the learning state. Then press the transmitter's learning button, blue indicator flashes twice, learning successfully. System will return to the standby state after 5 seconds.

Delete method: Press learning button for 5s, blue indicator light flashes quickly, all codes are deleted. (can't delete the individual code)



4 Output status selection

- If the switch is in M position, it's inching output, each time you press the transmitter, it will output a door opening signal about 1.5 seconds.
- ② M If the switch is in L position, it's holding output, output signal is maintained. Each time you press the transmitter, the output state will changed.
- Normally open function in the M state: In M state, press and hold the transmitter for ten seconds, then release it when the LED indicator flashes, entering the normally open state. When press the transmitter again, exit the normal state.

5 Technical Parameter

Power supply:	DC12~30V
Static current:	34mA(DC12V)
Action current:	62mA(DC12V)
Main contact capacity:	1A 24VDC
Receiver sensitivity:	-95dbm
Contact suction holding time:	1.5S
Product size:	110(L)x30(W)x15(H)mm

Transmitter	
Power supply:	3V(AAA battery*2pcs)
Standby current:	≤10µA
Emission current:	13mA
Battery life:	200 times/day, about 220 days
Emission distance:	over 30 meters in no obstacles area
Product size:	120(L)x120(W)x14(H)mm