



Face and Fingerprint Terminal Manual

Catalogue

Chapter 1. Introduction.....	03
Chapter 2. Installation Guide	
Installation Guide.....	03
Chapter 3. User registration and delete.....	03
Administrator registration.....	03
Face registration	04
Fingerprint registration	04
Induction card registration.....	05
Password registration.....	06
Picture registration	07
Delete user.....	08
Chapter 4. Device Settings.....	08
Basic settings.....	08
Language setting.....	08
Voice prompts	08
Volume control.....	09
Bell set.....	09
Bell count.....	09
Chapter 5. Advanced Settings.....	10
Verification method.....	10
Time setting.....	11
Restore factory settings	11
Clear all time log.....	12
Clear all management Log.....	12
Clear all user database.....	12
Chapter 6. Communication Settings.....	13
machine number setting.....	13
TCP/IP setting.....	13

Wifi setting.....	13
Port Settings.....	14
Communication password.....	14
Record Transmission method.....	15
The background IP adress.....	15
Chapter7. Access control settings.....	15
Define time zone.....	15
Duration of locks driving.....	16
Magnetic delay.....	16
Magnetic switch.....	17
Duress settings.....	17
Use tamper.....	17
Wiegand output type.....	18
Chapter8. U -disk to download.....	18
Download validation records.....	18
Download all verification records.....	18
Download Management Record.....	18
Download all management record.....	18
Down load user information.....	18
Upload User registraction Information.....	18
Chapter 9. Data Query.....	19
Registration information.....	19
Device information.....	19
Advanced Search.....	19
Chapter10. FAQ.....	19
Chapter11. Wiring Diagram.....	20


Chapter 1. Introduction.

Face attendance machine sales each year into a geometric growth trend, face attendance machine market demand increases gradually with the change of the market as it become a hot marketing getting more and more the attention of people, and demonstrated its good prospects, our company has lunched a series of face recognition technology and its products.

This product is designed for the needs of enterprises and institutions offline attendance management ,with a recognition speed, high accuracy features. The product use color screen, voice name; non-contact, convenience, health, quickly complete face attendance recognition. It also supports TCP / IP, wifi communication and U disk upload and download function,so it very suitable for the enterprises and institutions of attendance management.

Chapter 2. Installation Guide

Quick Installation Guide

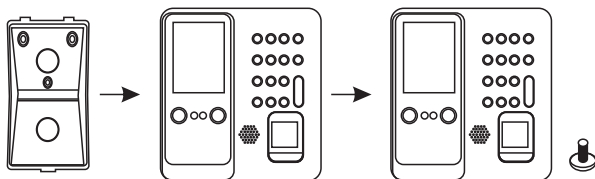

- Directly insert the plug of the standard power adapter is located on the back of the equipment on the right side of the slots wells;
- The network cable RJ45 crystal head inserted into the cable jack;
- Installation Back: Back on the bottom of the two horizontal positioning hole is apart from the ground vertical height of 1.15 meters;
- Install back fixed on the wall, and make sure the back around level, vertical from top to bottom and fit closely to the wall;
- Then the four fixing holes on the back of the alignment pin projecting from the back and insert Gently press down to make devices on the backplane and the backplane close fit, then fasten bottom of the device screws;
- The factory default no administrator, please register administrator.

Chapter 3. User registration and delete

1. Administrator Registration

- When equipment are not registered administrator, press the MENU key directly


enter the interface configuration administrator

- When the device has been registered administrator, press MENU to enter the administrator authentication interface, after verification by entering the function menu interface, then press ↑ / ↓ button to select the Configuration menu and press OK to enter; or press the corresponding number shortcuts.
- When the machine is set up super administrators and administrators, super administrator has all set permissions, administrators can not operate the advanced settings and communication settings menu

Note: To ensure all Settings are required to complete operation and should be configured at least one administrator before using the equipment.

2. Face registration

- Menu key → User → Enroll → input work number and name → choose Face → Acquisition Face

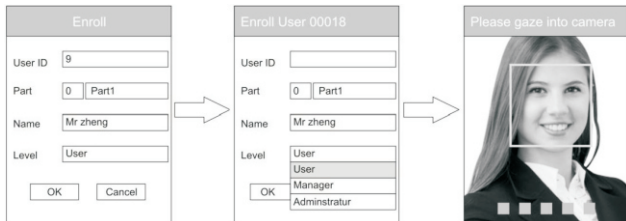


Please try to make the face appear in the center of the screen position, the camera detects automatically capture the face after face template, progress box below the display show the progress, information bar displays message text


3. Fingerprint registration

The right way of Validation of pressing : Press with your fingers fingerprint


window ,Fingerprint pattern heart in the centering of gathering window. Finger pressing as follows picture

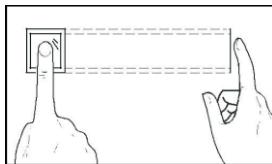


correct method

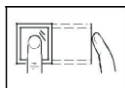


Out in the middle

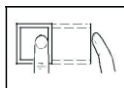

deviation

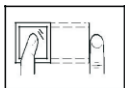


incline

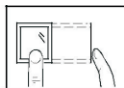

too lower

● Menu → User → Enroll → input job number and card → choose fingerprint → Continuous pressing three times → Presssing enter key, it will prompt registration success, as followings picture:

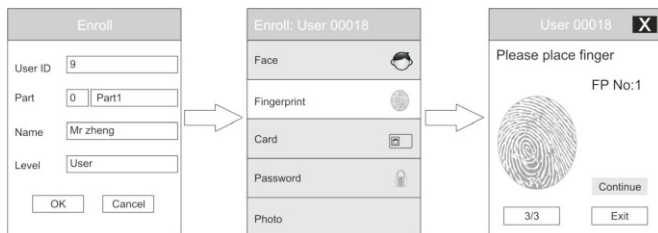

4. Induction card registration

● Menu key → User → Enroll → input job number and name → choose card → Card induction area → show numer of card → pressing enter key, Presssing enter key, it will prompt :card registration is successful,as followings picture:

Enroll

User ID

Part Part1

Name

Level

Enroll: User 00018

Face

Fingerprint

Card

Password

Photo

User 00018

Please place car


Cade No1

User 00018

Card registration is successful!


5. Password registration

● Menu → User → Enroll → input job number and card → choose password → Enter any 3-6 digit number combination → pressing enter key, password registration is successful, as follows:

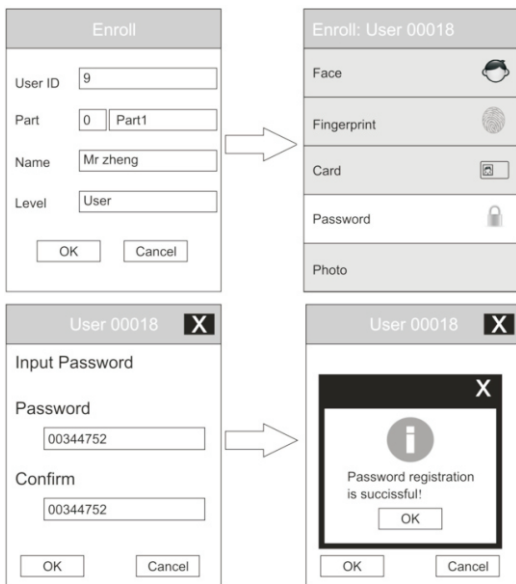


6. Picture registration

● Menu key → User → Enroll → input job number and name → choose photo → image acquisition → Pressing enter key, it will prompt registration successful, as following picture:

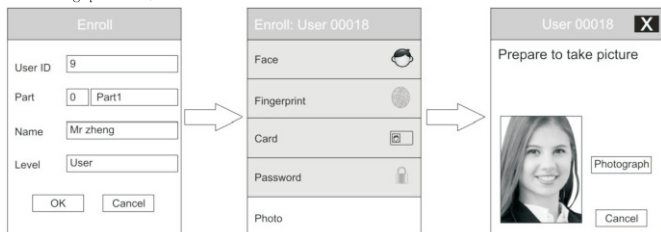

7. Delete user

● Mnu key → User → Delete → input job number → choose type of registration → pressing enter key → Press the OK button, it will prompts deleted successfully, as following picture.

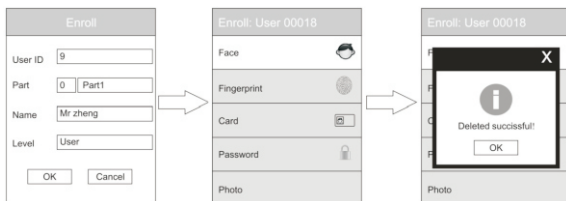

Chapter 4. Device Setting

1. Basic setting


A. language setting:

Menu key → Setting → Basic → Language → Pressing OK key → Press the up and down key choose display language, show as followings:



B. voice prompt:

Menu → device setting → basic → sound → press Yes key → Press the up and down key to choose whether or not closed, show as following:

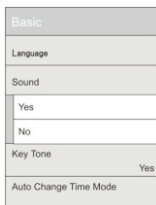

C. Volume control:


Menu key → Setting → Basic → Volume → press Yes key → choose input number from 1 to 10 to enter, it will show as followings

Basic	
Language	
Sound	
Yes	
Volume	
1	
Key Tone	
Yes	
Auto Change Time Mode	

D. Bell setting:

Menu key → Setting → Basic → Bell setting → input ring time then enter, as following picture:

Basic	
Sound	
Yes	
Volume	
1	
Key Tone	
Yes	
Auto Change Time Mode	
Bell Setting	



Bell Setting			
NO	Time	User/Noise	Bell
1	00:00	No Use	Bell-1
2	00:00	No Use	Bell-1
3	00:00	No Use	Bell-1
4	00:00	No Use	Bell-1
5	00:00	No Use	Bell-1
6	00:00	No Use	Bell-1
7	00:00	No Use	Bell-1
8	00:00	No Use	Bell-1

E. Bell count:

Menu key → Setting → Basic → Bell Count → press OK key → input ring counts (1-10), then pressing enter, show as following:

Basic	
Volume	
1	
Key Tone	
Yes	
Auto Change Time Mode	
Bell Setting	
Bell Count	
10	

Chapter 5. Advanced Settings.

A. Verification method:

Menu key → Setting → Advanced → Verification Mode → press Yes key → choose Verification type → press enter , show as following picture:

Advancde	
Verification Mode	FACE/FP/CD/PWD
Date and Time	>
Use Proxy Word	No
Proxy Setting Time	3s
Photo Setting	None

Setting the Verification of the mode is beyond this time period time of verification,high verify the Verification mode set period of time than the default priority.

Optional authentication (optional authentication)

Face/Fingerprint/ Card/Code	Users only need to register a face or fingerprint or RF card or a password,it can be verified by it.
Fingerprint+Card+Code	Users must register RF card, fingerprint, password, and user need to pass the RF card, fingerprint, password authentication at the same time .
card+password	Users must register RF card, password, and user need to pass the RF card, password authentication at the same time .
fingerprint+password	Users must register fingerprint , password, and user need to pass the fingerprint , password authentication at the same time .
Card+Fingerprint	Users must register at least RF card and fingerprint, and user need to pass the fingerprint , RF card authentication at the same time .
Card+face	Users must register at least RF card and face, and user need to pass the face, RF card authentication at the same time .
password+face	User must register at least password and face,and user need to pass password and face at the same time.

Fingerprint+face	User must register at least Fingerprint and face, and user need to pass Fingerprint and face at the same time.
face+card+password	User must register Fingerprint and face, and user need to pass Fingerprint and face at the same time.
Factory set up	Face/fingerprint /card/password

B. Time setting:

Menu setting → Device → Advanced → Date and Time → pressing ok key → choose time、date、date format → Press OK to modify it, show as followings:

Date and Time	
Time	18:24:36
Date	2014-02-15
Date Foemat	YYYY-MM-DD

C. Restore factory:

Menu setting→Setting→Advanced→Factory Restore → pressing “OK” key, The machine will delete all the settings.

Advanced	
Allowed # of Managers	5
Use Touch Sensor	No
Calibrate Sensor	
Upgrade Firmware	
Facrory Reset	

D. Clear all time log:

Menu → Setting → Advanced → Clear All Time Log, Pressing “OK” machine it will clear all verification records

Advanced	
Use Touch Sensor	No
Calibrate Sensor	
Upgrade Firmware	
Factory Reset	
Clear All Time Log	

E. Clear All Management Log:

Menu → Setting → Advanced → Clear All Management Log → Pressing “OK” key, it will clear management Log

Advanced	
Calibrate Sensor	
Upgrade Firmware	
Factory Reset	
Clear All Time Log	
Clear All Management Log	

F. Clear all user database:

Menu → Setting → Advanced → Clear All User Database → pressing “OK” key, it will delete all the registration user

Advanced	
Upgrade Firmware	
Factory Reset	
Clear All Time Log	
Clear All Management Log	
Clear All User Database	

Chapter 6. communication setting

A. machine number setting:

Menu → Setting → Communication → Device ID → input digit → confirm (need to set up multiple machines)

Communication	
Device ID	1
TCP/IP Settings	>
TCP Port	5005
Communication Password	No
Evnet Transfer Mode	No


B. TCP/IP setting:

Menu → Setting → Communication → TCP/IP settings → DHCP is set to "No" → Enter the IP address, subnet mask, gateway address (Parameter settings according to their company network)

Communication		TCP/IP Settings
Device ID	1	DHCP
TCP/IP Settings	>	No
TCP Port	5005	IP Address
Communication Password	No	192.168.001.224
Evnet Transfer Mode	No	Subnet mask
		255.255.255.000
		Gateway
		192.168.001.201
		DNS Server
		Manual

C. WiFi Setting:

Menu → Setting → Communication → select wifi Hub → Dynamic IP is set to "YES" → Choose network → Enter the wireless password → confirm → Click to view the connection status → Normal will show "Connected".

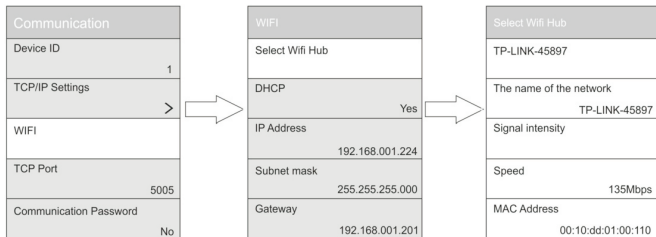

D. Port Settings:

Menu → Setting → Communications → TCP Port, The default is 5005

Communication	
Device ID	1
TCP/IP Settings	>
WiFi	
TCP Port	5005
Communication Password	No

E. Communication password:

Menu → setting → Communication → Communication Password: to improve the security of your data, you can set the communication password authentication, you can download the recording software. when password verification is successful .

Communication	
Device ID	1
TCP/IP Settings	>
WiFi	
TCP Port	5005
Communication Password	No

F. Record Transmission method:

Menu → setting → Communcation → Record Transmission method , urrently supports TCP/IP, the use of real-time monitoring function must be selected.

Communication	
Device ID	1
TCP/IP Settings	>
WIFI	
TCP Port	No
TCP/IP	
Communication Password	No

G. The background IP address:

Menu → Setting → Communcation → Record Transmission method Enter Host PC IP adder, use the real-time monitoring function must be selected


Communication	
TCP/IP Settings	>
WIFI	
TCP Port	5005
Communication Password	No
Host PC IP Adder	000.000.000.000

Chapter7 .Access control settings**A. Define time zone:**

Menu → Setting → Access→ Define time zone → Time zone

50 time period of time can beset on a access control machine, but a user can arrange two periods.

Access	
Definr Time Zone	
Door Open Time	5s
Door Open Timeout	20s
Door Sensor Type	Open
Duress Settings	>



Definr Time Zone	
No	Time Zone
1	
2	SUN 00:00:23:50 System Defaul
3	MON 00:00:23:50 System Defaul
4	TUE 00:00:23:50 System Defaul
5	WED 00:00:23:50 System Defaul
6	THU 00:00:23:50 System Defaul
7	FRI 00:00:23:50 System Defaul
8	SAT 00:00:23:50 System Defaul

B. Duration of locks driving:

Menu → Setting → Access → Door open time, the time required to set to open the door for the time value between 0 to 10 seconds

Access
Definr Time Zone
Door Open Time
5s
Door Open Timeout
20s
Door Sensor Type
Open
Duress Settings
>

C. Magnetic delay:

Menu → Setting → Access → Door open timeout, set Magnetic extension of time.

Access
Definr Time Zone
Door Open Time
5s
Door Open Timeout
20s
Door Sensor Type
Open
Duress Settings
>

D. Magnetic switch:

Menu → setting → Access → Door sensor type, setting magnetic delay state.


Access
Definr Time Zone
None
Open
Close
Door Sensor Type
Open
Duress Settings
>

E. Duress settings:

Menu → Setting → Access → Duress settings,

Stress password register and alarm delay operation, when verified as registered duress password, host duress alarm notification to the manager (Note: All of the fingerprint access control machine has the function.)

Access
Definr Time Zone
Door Open Time
5s
Door Open Timeout
20s
Door Sensor Type
Open
Duress Settings
>



Duress Settings
Use Password Alarm
No
Alarm Delay
No

F. Use tamper:

Menu → setting → Access → Watch tamper Setting "on" when access control to force open an alarm.

Access
Door Open Time
5s
Door Open Timeout
20s
Door Sensor Type
Open
Duress Settings
>
Watch Tamper
No

G. Wiegand output type:

Menu → Setting → Access → wiegrand Output Type, choose mode of WG26 or WG34

Access	
Door Open Timeout	20s
Door Sensor Type	Open
Duress Settings	>
Watch Tamper	No
Wiegand Output Type	User ID(34)

Chapter8. U -disk to download

A. Menu→the Usb disk management as followings.

USB Disk
Download New Time Log
Download All Time Log
Download New Management Log
Download All Management Log
Download User Database

1. Download validation records: First insert U disk U port access control, you can download the latest access records.
2. Download all validation records: First insert U disk U port access control, you can download the latest access all records.
3. Download Management Record: First insert U disk U port access control, you can download the download management record.
4. Download all management record: First insert U disk U port access control, you can download all the management information.
5. Down load user registration information: First insert U disk U port access control, you can download all the user registration information .
6. Up load user registractioin information : User information can be registered on a machine when a user with multiple machines, and then complete the registration user information through U disk to download, and then uploaded to the new machine by U disk

Chapter 9. Data Query

Menu→Sys info



- 1.Registration information:Queries the user registration, record storage conditions.
- 2.This machine' s information: inquire machine information, such as: Release date,anufacture, type.
- 3.Aadvanced search: Find Personal certain period of time attendance records, management records, personal registration information.

Chapter10. FAQ

1.Users often can not be verified by fingerprints, (Press fingerprint did not respond or insensitive),How to solve this problem?

Answer: As following situation that may cause some employees are not able to properly operate a fingerprint.

1. if you hand finger is too dry or too wet , as the principle of optical fingerprint sensor is working, this situation will lead to the identification insensitive or does not recognize, you can dip a wet towel fingerprint, finger wet or dry, they can improve sensitivity and recognition rate .
- 2.If finger of the fingerprint wear more serious.
- 3.Finger peeling.
- 4.Employee pressure method is not correct, you should use the fingerprint surface in parallel to the sensor, press the contact area increase the speed of induction. Finally if user fingerprint or unrecognized , the fingerprint brush once again to re-register another one finger, so users need to select when registering to use good quality fingerprints (fingerprint clarity, etc.), try to use finger touch fingerprint head area larger, after registration is complete to do a comparison test, and suggested several alternate multi-registered fingerprint.

In addition, can also be set using radio frequency card or password authentication

2.Why the door machine cannot communicate with computer?

Answer: May have the following reasons:

1. Access control is not turned on or don't connected to the computer
2. if check the computer's serial port and RS485 are normal
3. If the TCP/IP can't normal communication, to Check whether the IP Settings in the access control machine ,and , Whether in computer network consistency.

3. All users can not verify the door, how to solve?

Answer: First of all you should backup all the data in the access control , then access control to restore factory settings.

4. Forget who is the administrator of the machine set up, ask how to solve?

Answer: There is a black button near to exte power supply port, if you long press on it will Delete the administrator.

5. if there is some of touch button insensitive or too sensitive, how to solve it?

Answer: when the powered up for access control machine hand don't close to touch key, because when machine start conductor will affect touch initialization.

6. U disk cannot download data, it failure or tooltips when downloading data inserted U disk, how to solve it?

Answer: there may be caused by the following reasons:

1. U-Select size capacity within 8 G.
2. whether the U disk file is too much, cause the space is too small, suggest that format the U disk, download again

7. How to solve that automatic unattended operation repeatedly prompt "Please press the (left) finger," after the access control machine start up?

Answer: there may be caused by the following reasons:

1. Machines use for a long time when collecting the first surface becomes dirty or scratched, it will gather heads mistaken surface by a finger, this cannot be verified, you can use the adhesive tape to paste stolen pickup surface or soft cloth dampened with water can be used for cleaning in order to solve the problem .

Chapter 11. Wiring Diagram

